

TEIN BASIC DRIVING MASTER DAMPER

A4 Quattro 02-05, 06+

TEIN Height Adjustable Shock Absorber Installation Instructions.

Thank you for purchasing a set of TEIN shock absorbers (the "product"). This product complies with JASO automobile standards. The product may only be installed in race vehicles, show vehicles and other specially configured vehicles intended for off-road use.

THE PRODUCT MAY NOT BE INSTALLED IN VEHICLES DRIVEN ON PUBLIC ROADS.

The shock absorber's damping force and spring rate (spring hardness) differ from factory standard suspension.

All shock absorbers may be completely disassembled so that changes to damping force and stroke settings (i.e., short stroke suspension) can be made. Disassembly also provides easy access for overhaul, repair, and maintenance. However, any disassembly of the shock absorber or any portion of the shock absorber must be performed only by TEIN.

TEIN should be contacted for information as to the scope of disassembly services required, related labor costs, and time necessary to complete any disassembly work. The contact information for TEIN's office is:

TEIN UK LIMITED

Unit 7 Avant Business Centre, Denbigh West Industrial Estate
Milton Keynes MK1 1DL United Kingdom
Phone +44(0)870 606 6543 / FAX +44(0)870 600 1161

URL: <http://www.tein.co.uk>

TEIN assumes no responsibility for any accident, injuries, death or damage which may be related to disassembly of the product performed by non-TEIN personnel.

Contents

	Page
Preface	2
Important Product Information	3
Before/After Installation	4
Shock Absorber Removal, Installation of the Shock Absorber	4
Adjustment of Ride Height	5-6
Important Notice	7
Assembly Diagram	8-9

 **WARNING**

- The removal of brake parts requires specialized skills. Therefore, **INSTALLATION OF THIS PRODUCT SHOULD BE DONE ONLY BY LICENSED MECHANICS.**
- This document is copyrighted and the printing of this document in part or in full, is prohibited by law.

 **CAUTION**

- This product has been developed according to the specifications of Japanese law.
- When using the OEM mounts, use the parts noted with part numbers on our assembly instructions.
- Do not install this product in vehicles other than those specified by this manual. Doing so may result in damage to the vehicle and/or to the product.
- TEIN assumes no responsibility for damage, accidents, injuries or death resulting from the improper installation, assembly, misuse, and/or modification of the product.

! NOTE

- Please read these Instructions before installation.
- Before installing this product, verify that all necessary parts have been included.
- Note that product design improvements and changes may be made without notice.

 **CAUTION– READ PRIOR TO INSTALLATION**

Please ensure that all components of the TEIN damper kit are tightened before installation. Items that require tightening are: nut or pillow upper nut, seat locks, bracket locks (if applicable), camber plate bolts (if applicable), stabilizer link (if applicable), and/or any other parts. Torque specifications are listed in the installation section of this manual. Please tighten upper mount and lower bracket mounting bolts to OEM specifications, which can be found in any vehicle service manual.

WARNING

- This product contains highly compressed gas. Do not disassemble or expose to flames. Doing so may result in the cracking or explosion of the product. **DO NOT INSTALL THE PRODUCT IF IT HAS BEEN DISASSEMBLED IN ANY WAY.**
- This product has been designed to withstand the stresses of off road driving. Therefore, the product should not be modified in any way.

CAUTION

- If an impact wrench is used in the removal and installation of the upper mount, loads may be placed on the nut inside the shock absorber which may cause loosening or otherwise damage the product.

AN IMPACT WRENCH SHOULD NOT BE USED DURING INSTALLATION unless absolutely necessary. However, if it is imperative that an impact wrench be used, make sure to conduct the operation at **LOW** torque, and **MAKE SURE THAT THE MAIN ROD DOES NOT TURN.**

TEIN assumes no responsibility for loose internal nuts caused by improper impact wrench use.

- When removing or tightening the top nut, **DO NOT CLAMP THE PISTON ROD AND THE THREADED SECTION OF THE PISTON ROD** with any tool which might cause scratching.
- Do not expose this product to shock (for example, physically dropping the product).
- If the rod is scratched, the oil seal may become damaged which may create oil leak defects.
- To increase the durability and performance of the product, the outer diameter of the product is often much larger than the OEM suspension. Some vehicle suspensions do not include a dust cover boot due to lack of installation space. Where no dust cover boot has been included, we recommend periodically cleaning the surface of the rod, and inspecting the suspension regularly to help extend performance.
- Beware that dirt and grit on the damper rod may cause scratches.

Before/After Installation

WARNING

The installer assumes all liability for proper installation of the product. Please read these instructions carefully before beginning installation.

CAUTION

- The upper mount used with this suspension must be a TEIN upper mount or OEM top mount. Upper mounts made by other manufacturers may not properly fit the suspension.
- **TEIN TAKES NO RESPONSIBILITY FOR ANY DAMAGE TO THE SUSPENSION OR ACCIDENTS RESULTING FROM THE COMBINATION OF THIS PRODUCT WITH PRODUCTS MADE BY OTHER MANUFACTURERS.**
- Installer should wear work gloves when installing the product to avoid injury.
- **PLEASE CHECK YOUR LOCAL MOTOR VEHICLE LAWS AND REGULATIONS REGARDING INSTALLED HEIGHT ADJUSTABLE SUSPENSION (E.G. MINIMUM RIDE HEIGHT, MINIMUM HEADLIGHT CENTER HEIGHT).**
- TEIN takes no responsibility for any violations of vehicle codes, rules, laws or regulations.
- Upon installation, avoid rough handling and drive slowly.
- Be sure to check product for loosening and oil leaks.
- Periodically re-tighten all parts at the specified torque values.
- After the proper height has been determined, the alignment should be adjusted with an alignment tester.
- The vehicle should be taken to an alignment shop or for reference values, see vehicle manufacture service manual.

Shock Absorber Removal

CAUTION

- Use a spring compressor to compress the spring in order to remove the top lock nut.
- Make sure that the spring is compressed and not in contact with the spring seat and top spring seat before removing the top nut.
- When loosening the spring compressor, loosen the spring evenly and carefully remove the coil from the shock absorber.
- **DO NOT RE-USE THE PISTON ROD TOP LOCK NUT.**



Installation of the Shock Absorber

CAUTION

- Lowering the vehicle with the lower spring seat at the lowest setting may result in damage to the vehicle.
- Please see the assembly diagram (Page 8 and 9) for the torque values of the piston rod lock nut.

Adjustment of Ride Height

After Installation of the Shock absorber

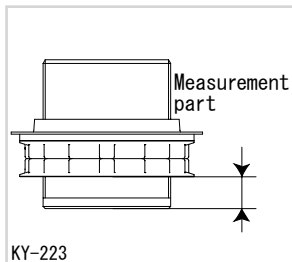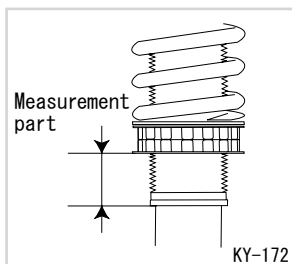

1. After installing the shock absorber on the vehicle, measure the area marked in the Figure, and adjust to match the reference values shown.

B6		B7	
Reference Value		Reference Value	
Front	1.2 inch (30 mm)	Front	1.4 inch (36 mm)
Rear	1.0 inch (25 mm)	Rear	1.2 inch (31 mm)


※1 inch=25.4mm,
1mm=0.039inch

! CAUTION

● **THIS IS THE REFERENCE VALUE TO BE USED WITH THE STANDARD RATE SPRINGS.** (Springs included with this product).

! NOTE

● Lubricant is used on the product body threads to prevent rust after being manufactured. This lubricant is not oil leaking from the product.

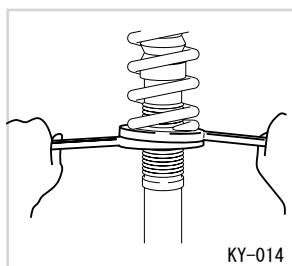

2. After adjusting to the appropriate height, use the adjustment wrench included with the Product to lock the lower spring seat.

When servicing, hold the lower spring seat with the wrench, and screw the seatlock upwards, tightening about 1/8 (45°) turns from where the lower spring seat and seatlock meet.

! CAUTION


- Please make sure that the spring seat lock is locked after the ride height is adjusted.
- Gravel or dirt may have adhered to the adjustment tube.
- The threads of the seat lock and lower spring seat may become damaged, and cause the seat lock to stick if gravel and dirt are not cleaned before adjustment.

! NOTE

- If the parts do not screw smoothly, use a lubricant. To prevent the sticking of the seat lock and spring seat, it is recommended that the pieces be periodically maintained.

! CAUTION

- **AFTER RIDE HEIGHT ADJUSTMENT, CONFIRM THAT SPRING SEAT IS LOCKED. FAILURE TO LOCK SPRING SEAT MAY RESULT IN DAMAGE TO THE VEHICLE.**

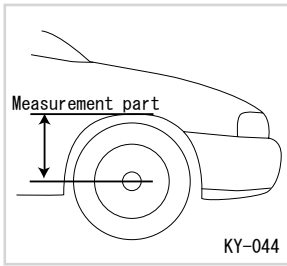

3. After installing the tires, measure the distance from the wheel center and the fender edge as shown in the Figure, and confirm that it corresponds to the reference value shown below.

B6, B7

Reference Value	
Front	12.8 inch (325 mm)
Rear	12.8 inch (325 mm)

⚠ CAUTION

- **THIS IS THE REFERENCE VALUE TO BE USED WITH THE STANDARD RATE SPRINGS.**
(Springs included with this product).

⚠ CAUTION

- **THE FIGURE ABOVE MAY VARY DEPENDING UPON VEHICLE WEIGHT, MODEL, AND OPTIONS.**

⚠ CAUTION

The lowering of the ride height correlates to the spring rate.


- Depending on the spring rate, the ride height may not drop as easily.
- If the spring rate is changed, readjust the ride height.
- When using a spring rate lower than the standard spring rate, the spring seat may require adjustment.

Important Notice

1. TEIN takes no responsibility for parts which are prohibited by local laws.
2. The installation of this product on vehicles running on public roads may be dangerous, and may violate local laws.
3. Purchaser takes full responsibility for proper part installation.
4. All parts should be installed by a properly licensed mechanic.
5. TEIN takes no responsibility for damage, injuries, or death caused directly or indirectly by this product.
6. TEIN will not take any responsibility for errors and/or omission in these installation instructions.

MEMO

Assembly Diagram (Front)

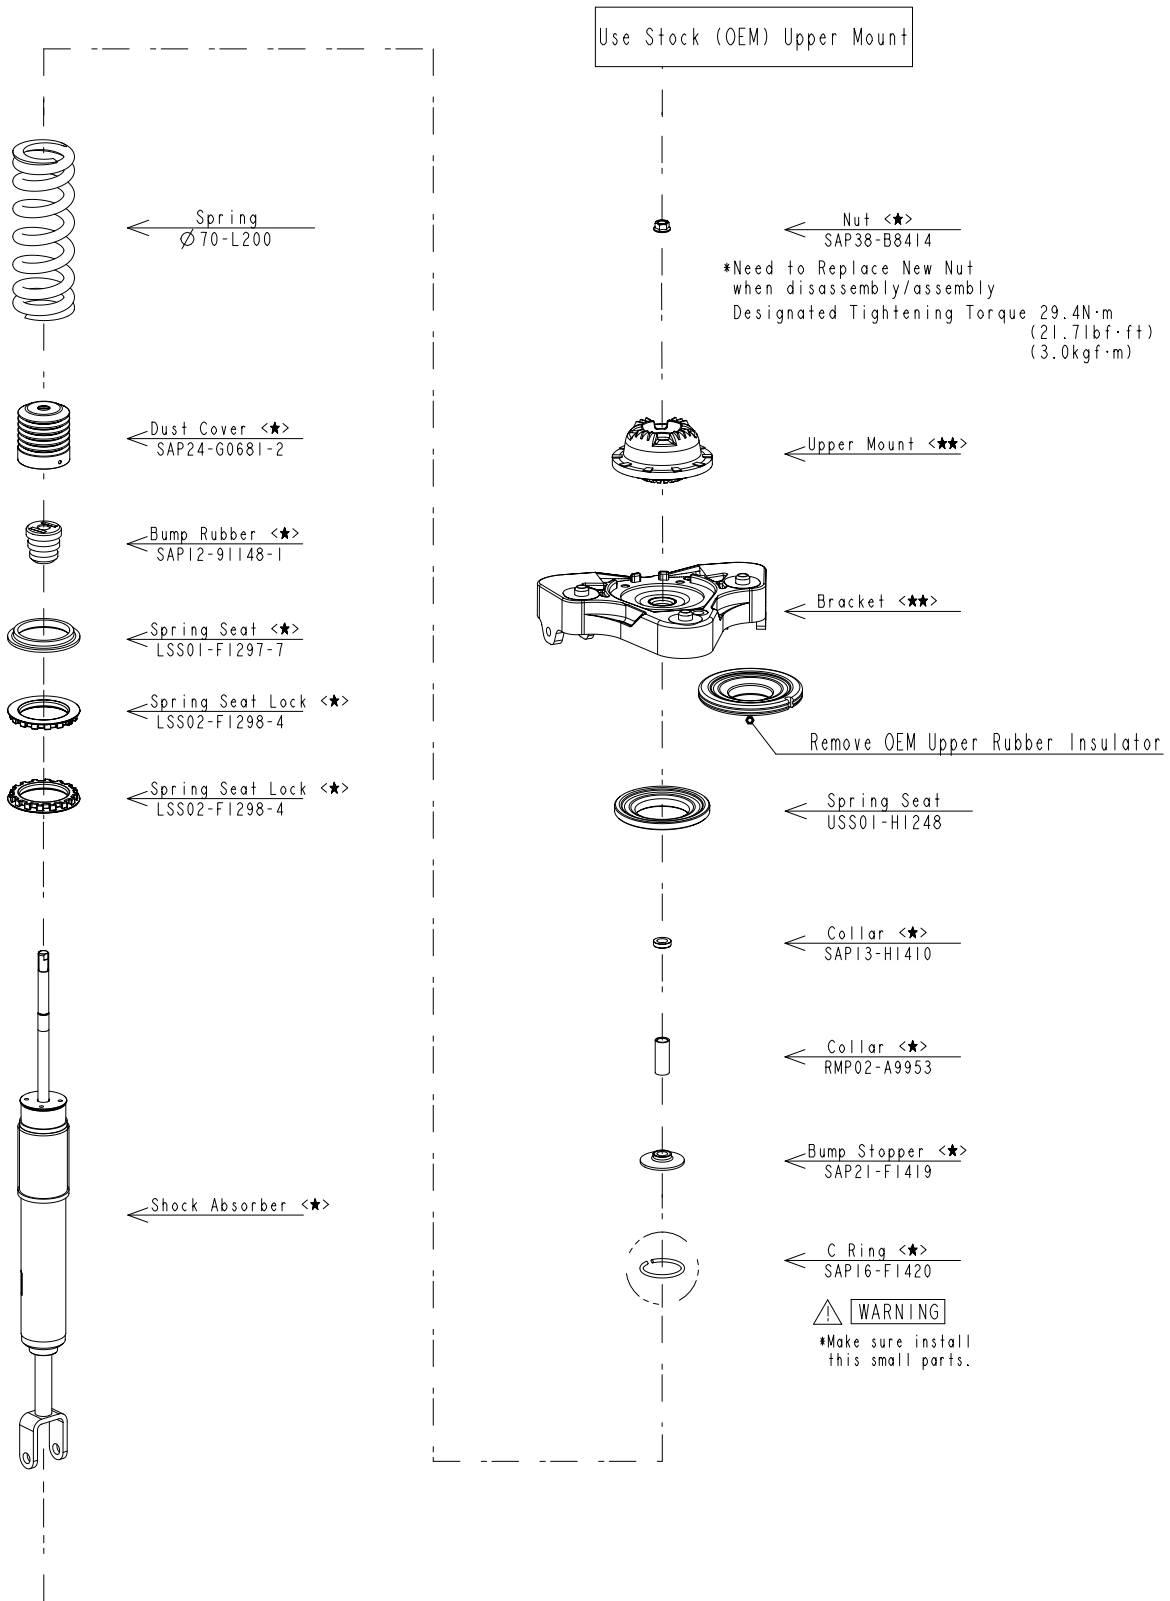

★ Parts are included Shock Absorber Assy (Parts Number DLG70-U2531)
★★ Use Stock (OEM) Parts

Assembly Diagram (Rear)

